


Stainless Steel High Temperature Installation Instructions

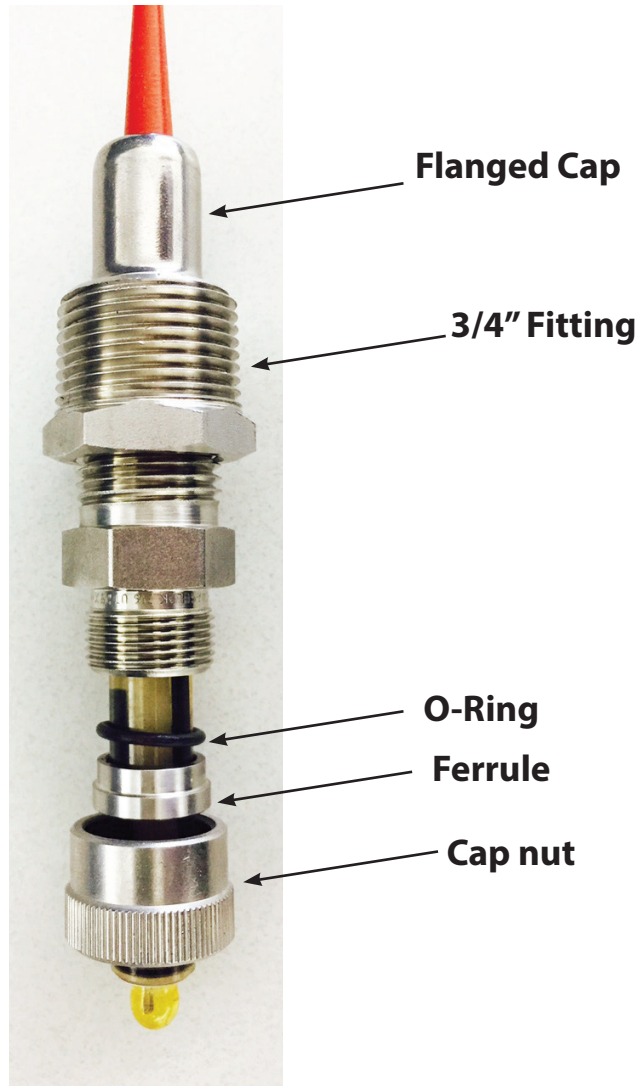

1. Lubricate the o-ring inside the gland. (Lubricant should be a petroleum based grease)
2. With the cap nut loose, insert a 12mm glass or polymer electrode into the fitting. (Walchem P/N 102029 pH or 102963 ORP)
3. Make sure the cap nut, O-ring and ferrule are arranged as shown in the illustration.
4. **HAND TIGHTEN** the cap nut just enough to grip the electrode. Too much pressure will crush the electrode!